




### How to delete the 'My' favourite position

1. Briefly press the 'My' button to reach your pre-programmed position.




2. Press and hold the 'My' button on the remote until the motor moves the blind up and down.

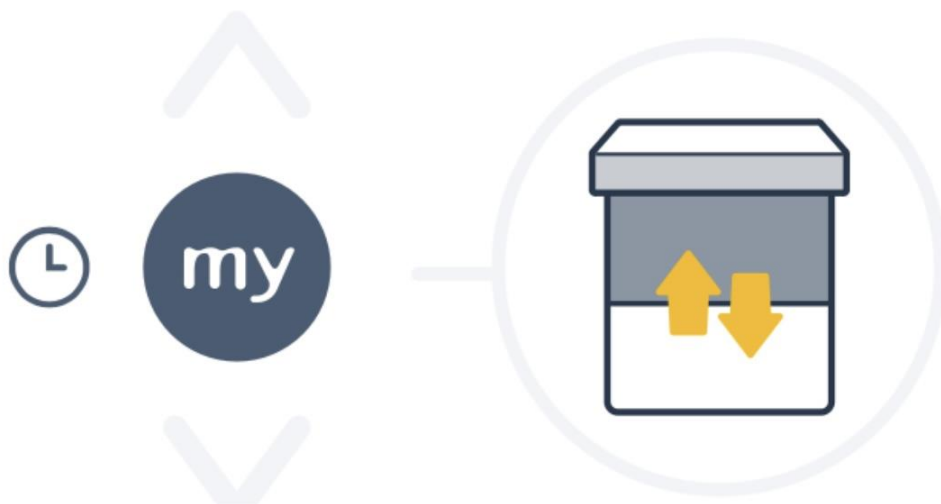



3. The favourite 'My' position is now removed.

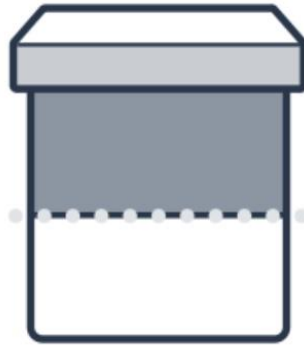

4. To reset a new My position, please refer to the 'Setting My Position' instruction in the Knowledge Centre.

