 





How to operate your blind

When your blind arrives, it will have already received 3 hours of charge. We still encourage charging your motor fully (an additional 3-6 hours) prior to installation.

1. To preserve battery charge, your motor is supplied in 'Sleep Mode'. To Wake your motor, either attach the charger, or briefly press the program/reset button on the motor head. The motor will respond with an up and down movement.

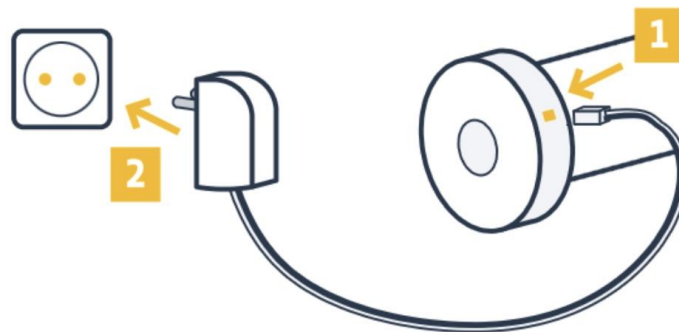


 OR

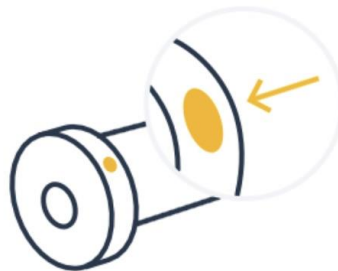




2. If you ordered a remote control with your blind(s), the control will be paired to the motor. Test your blind by pressing the down button on your control. The blind will move down and stop at the already set lower limit, based on your measurements.

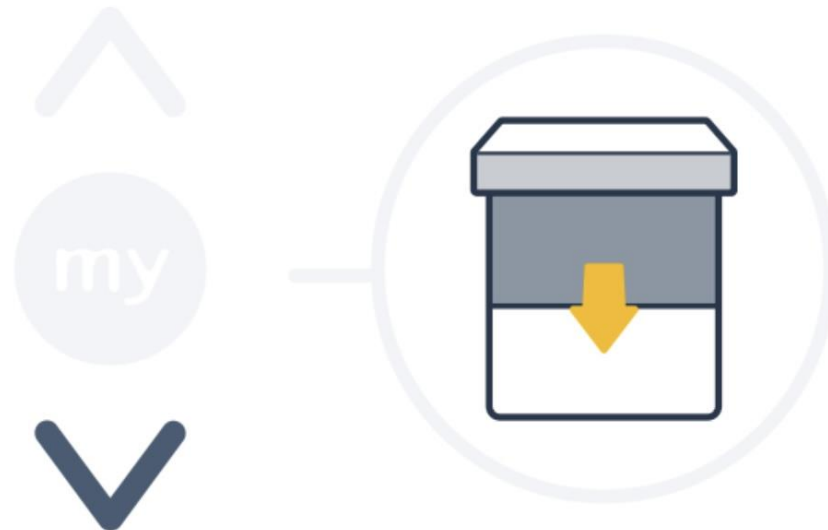


- a. If you need to adjust your limits, please refer to the Guides section of the website.
- b. If your blind does not work, please refer to the Guides section of the website.
- c. If you did not order a remote with your blind and need to pair a remote to your blind, please refer to the Guides section of the website.
- d. If you are using the Situo 5 or Telis 16 remote control, make sure you have the correct channel selected using the blank button to cycle through channels. Your motor will only respond when the correct channel is selected.

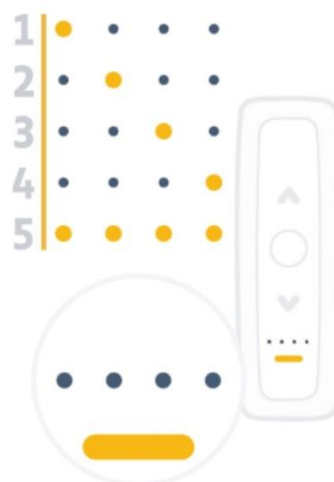



 3. You can then use the Up button to raise the blind to the preset top limit. If you want to stop the blind at any stage, briefly press the My button.

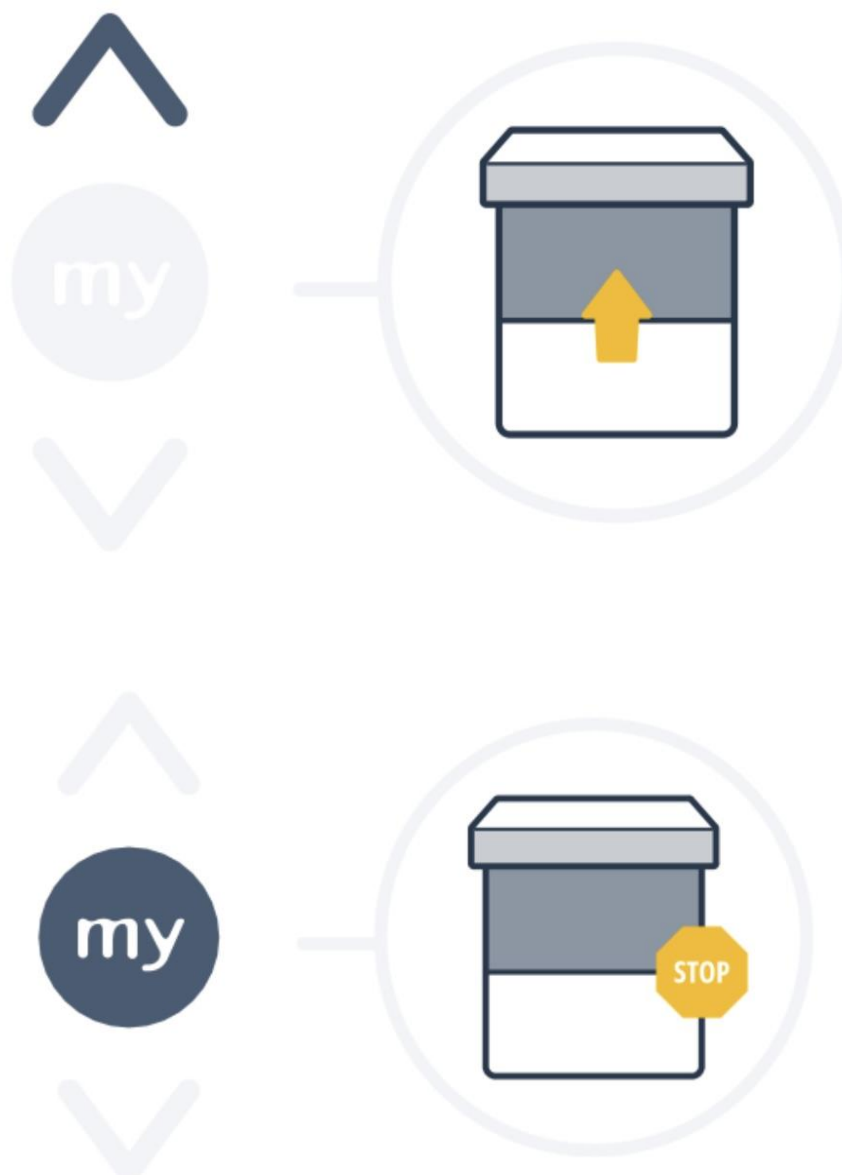

4. If you need to make any adjustments or have an issue with the operation of your blind, please refer to the Guides section of the website for more tips on getting your blind set up perfectly.

